

How to Pair the ALRS

Firstly, before we can go any further, we will need to know what your load cells I.D number is. If you turn on your handset it will display your I.D number? Once you know what the I.D is you can then turn off the handset again.

Now here is a breakdown of the steps to go through

- 1, Insert two AA batteries back in to your load cell, leaving the middle battery out.
- 2, Now with your handset press the (TARE) & (ON) buttons together, your handset should now read (SETTINGS)
- 3, Now if you can now insert your middle battery back into your load cell.
- 4, Your handset should now read (ECO MODE)
- 5, Press the (PAGE) button until your handset reads (ID #)
- 6, Press the (ON) button to accept and your handset will now read (00)
- 7, Now if you can now enter in your load cells I.D number, you will know what you're I.D number is, this is the section in **RED** above.
- 8, To enter in your I.D number press the (PAGE) button to increase the I.D, you can press the (TARE) button to move your I.D over to the left, if you make an error or go past the I.D number you need, press the (ZERO) button to reset back to (00)
- 9, Once you have set your I.D press the (ON) button to accept.
- 10, Your load cell should go back into working order.

If customer still has issues, then the load cell should be sent back to JCM for further inspections